

## HOW TO GET YOUR RESULTS EARLIER WITH MORE ACCURACY

After your test is completed (exposed for more than 3 days but less than 7), follow the ending and sealing instructions on the reverse side. Return your sample(s) to our lab as soon as possible. The quicker they arrive, the faster you'll receive your test results.



**PUT NO EXTRA LABELS OR STAMPS ON THE PACKET.  
USE AN OUTER ENVELOPE FOR MULTIPLE SAMPLES  
OR IF ADDITIONAL POSTAGE IS REQUIRED.**

For the quickest, most accurate results, make sure your sample arrives at our lab in 6 days or less. Samples are analyzed and results are available the same day of arrival. Your test results will be sent to your (readable) email address, and can be accessed online at [www.radon.com/results](http://www.radon.com/results).

**As stressed above, return your sample(s) ASAP!!**

Experience has proven the following return methods equal faster, most accurate test results:

**FedEx or UPS Express  
Delivery, use our  
street address:** → Air Chek Inc  
→ 1936 Butler Bridge Rd  
→ Mills River, NC 28759

**USPS (Postal) Express  
Mail or Priority Mail,  
use our PO Box:** → Air Chek Inc  
→ PO Box 2000  
→ Naples, NC 28760

### IMPORTANT REMINDERS

#### BEFORE YOUR TEST

- Conduct your test before the "Use By" date
- Discard the small white dessicant pack, if provided
- Record the 7-digit serial number of your Sampler
- Clearly circle start date, time, and temperature
- Clearly print your name, address, and email. **NO LABELS.**
- Test the lowest livable area of the building
- Hang the Sampler from its plastic hook; do not lay on a table

#### DURING YOUR TEST

- Keep ALL windows in the building closed
- Close all doors behind you when entering or leaving
- Do not move the Sampler once the test has begun

#### AFTER YOUR TEST

- Clearly circle end date, time, and answer all questions
- Discard the plastic hook and cardboard draft shield
- Seal the Sampler after removing the cardboard draft shield
- Do not tear the Sampler, or the brown paper envelope inside
- Do not stick any labels or extra postage to the packet
- Return the Sampler to our lab as soon as possible

Air Chek, Inc. makes every reasonable effort to maintain the highest possible quality control during the manufacture and analysis of our test devices. However, we cannot control what the end-user does with or to our test devices when they are not in our possession. Our manufacturing, analysis, and reporting procedures include several checks and verification steps (such as double-entry of user-provided information). Therefore, we cannot provide a warranty of any kind, expressed or implied, including without limitation any implied warranty of merchantability or fitness with respect to any item furnished, information supplied, or services rendered by Air Chek Inc. Before any action is taken on the basis of test results or analysis provided to you by Air Chek, Inc., we recommend that further testing be conducted. Neither Air Chek, Inc. nor any of our employees or agents shall be liable under any claim, charge, or demand, whether in contract, tort, or otherwise for any and all losses, costs, charges, claims, demands, fees, expenses, injuries, or damages (including without limitation incidental or consequential damages which are hereby excluded) of any nature or kind arising out of connection with, resulting from, or sustained as a result of any item furnished, information supplied, or service rendered to by Air Chek, Inc.



**Conceived,  
Designed, and  
Manufactured  
in the USA**

**SINCE 1985, AIR CHEK HAS  
PROVIDED ANALYSIS THE  
SAME DAY OF ARRIVAL  
AT NO EXTRA CHARGE**



**OVER FOR INSTRUCTIONS**

Keep inner plastic sealed until ready to use

3 to 7 day

**RADON  
TEST KIT**

**UNFOLD FOR  
COMPLETE INSTRUCTIONS**



**Air Chek, Inc.  
[www.radon.com](http://www.radon.com)  
800-AIR-CHEK**

**USE TWO (2) FOR REAL ESTATE TESTS**



## FREQUENTLY ASKED QUESTIONS

### 1) WHEN IS THE BEST TIME TO TEST FOR RADON?

You can test your home for radon gas any time of the year, as long as you can maintain Closed House Conditions. This means all windows and exterior doors should stay closed for 12 hours before and during the test period. (You can still come and go normally, just close the doors behind you.) **Important: Don't test during severe weather - hard rains, heavy snows, strong winds.**

### 2) WHERE SHOULD I HANG THE SAMPLER?

The U.S. EPA suggests testing the lowest level used on a regular basis, or that could be used by a potential buyer.

Hang the Sampler at normal breathing level (between roughly 2-3 ft - pillow height - and 5 ft from the floor) where it will not be disturbed. You can use string to hang it from a central ceiling light or ceiling fan, or hang it on an interior, non-masonry wall at least 3 feet from windows, doors, hallways, exterior walls, and heat/AC vents. Keep out of direct sunlight and away from heat sources like stoves, fireplaces, and baseboard heaters. Hanging it from or close to your home thermostat is a good choice.



AVOID testing in areas of high humidity such as bathrooms, kitchens, laundry rooms, closets, or damp basements. It this is unavoidable, test for **no more** than 4 days.

### 3) CAN I RUN MY HEAT or A/C DURING THE TEST?

Yes, just close doors behind you when entering or leaving. Avoid creating a draft, so no fans of any sort (attic, ceiling, window, floor, etc.) for the duration of the test. Exception: Bathroom and kitchen exhaust fans can be run as usual.

### 4) HOW LONG SHOULD I CONDUCT THE TEST?

Expose Sampler Packet for a minimum of 3 days (72 hours) and a maximum of 7 days (168 hours). **4 DAYS IS IDEAL.**  
**Too short or too long exposures will invalidate the test.**

### 5) WHAT DO I DO WHEN THE TEST IS OVER and I'VE SEALED THE PACKET?

Return it to the lab as soon as possible. **IMPORTANT: USE THE FASTEST RETURN SERVICE AVAILABLE IN YOUR AREA.** Early arrival = accurate results.

### 6) WHEN and HOW DO I GET MY TEST RESULTS?

Your test results are available later the same day we receive your packet: Go to [www.radon.com/results](http://www.radon.com/results) and enter your sampler packet serial number. If you've included a readable email address, we'll email your results. Results are always sent to the mailing address you've written on the packet.

### 7) WHERE CAN I GET MORE INFO ON RADON?

Visit our Radon Information Center at [www.radon.com](http://www.radon.com)



### REAL ESTATE TRANSACTIONS

Conducting a radon test for a Real Estate transaction? Use two Sampler Packets hung approximately 6-inches apart. Follow U.S. EPA Real Estate testing protocols:  
[www.epa.gov/radon/pubs](http://www.epa.gov/radon/pubs)



INSTRUCTIONS/VIDEOS ARE AVAILABLE AT: [www.radon.com/testing](http://www.radon.com/testing)

# START HERE


Your Radon Test Kit includes:



\*Only used during testing period

When you're ready to start your radon test, discard Plastic Sleeve and Dessiccant Pack

## Record the Serial Number

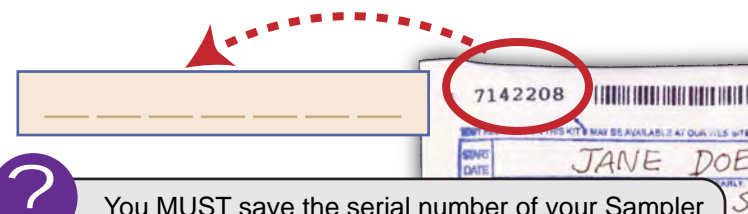

You MUST save the serial number of your Sampler if you want to access your test results by phone or online at [www.radon.com/results](http://www.radon.com/results)

## Decide Where to Hang Your Radon Sampler Packet

Any CENTRALLY-LOCATED interior wall



An ideal place is near a thermostat  
Also good is a nightstand lampshade

Best locations are interior areas where you spend the most time, e.g. bedrooms and livingrooms.

Avoid humid areas - kitchen, bathroom, laundry, closets, damp basements. DO NOT PLACE ON THE FLOOR, ON A MASONRY WALL, OR NEAR AN EXTERIOR DOOR OR WINDOW.

## Begin Radon Test

1 Write on the Packet's Data Panel  
USE A PEN - PLEASE NO LABELS

Carefully write your COMPLETE postal service address

Carefully print your email

Radon test results are always sent by US Mail. Please print clearly because we need to be able to read it!  
If we can read your email address, we'll send your results the same day of arrival and analysis.

Circle start day and start hour

NOTE: These are 24-hour clocks, like those used by airline pilots

2 Prepare the Draft Shield

### GRIP


GENTLY, AT EDGES UNTIL THE PACKET BEGINS TO OPEN

### SQUEEZE

OUTER EDGES INWARD WHILE PUSHING THE OVAL-SHAPED DRAFT SHIELD DOWN INTO THE MOUTH OF THE PACKET TO HOLD IT OPEN

### TAP

GENTLY NEAR THE TAB UNTIL THE DRAFT SHIELD BOTTOMS OUT

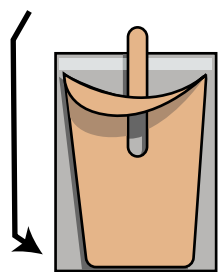

The Draft Shield serves to hold open the Sampler Packet and to prevent air from blowing across the activated charcoal detector.

**RADON GAS** easily passes through the Draft Shield.

3 Hang the Sampler Packet  
USING THE ATTACHED HOOK, AT BREATHING LEVEL (2-5 FT FROM FLOOR), AT THE LOCATION YOU'VE CHOSEN, USING A TACK OR A PIECE OF TAPE.

INSTRUCTIONS/VIDEOS ARE AVAILABLE AT: [www.radon.com/testing](http://www.radon.com/testing)

SEE FAQs ON THE OTHER SIDE FOR MORE DETAILS



## End Your Test

AFTER 3-7 DAYS

1 Write on the Packet's Data Panel  
USE A PEN, NOT A PENCIL

Circle end day and end hour

Circle answers to ALL remaining questions below

2 Discard Hanger and Draft Shield  
OR RECYCLE- DO NOT LEAVE INSIDE

3 Seal the Packet  
TO ENSURE NO RADON ESCAPES

FOLD  
FLAP TO EXPOSE  
ADHESIVE STRIP

PEEL  
AND REMOVE THE  
ADHESIVE STRIP  
COVER

PRESS  
TOGETHER TO  
FORM AIR-TIGHT SEAL  
(REPAIR LEAKS WITH TAPE)

You're Done! Now Return the Sealed Packet to the Lab

THE SOONER THE BETTER - USE FEDEX OR UPS NEXT DAY FOR BEST RESULTS  
SEE REVERSE SIDE FOR DETAILS